Maximise Board & Minimise Waste
Rafters: 600mm Centres

31/3/21
Version 1.0

Typically, a 2400mm x 1200mm insulation board is cut as follows and the offcut is often not used:

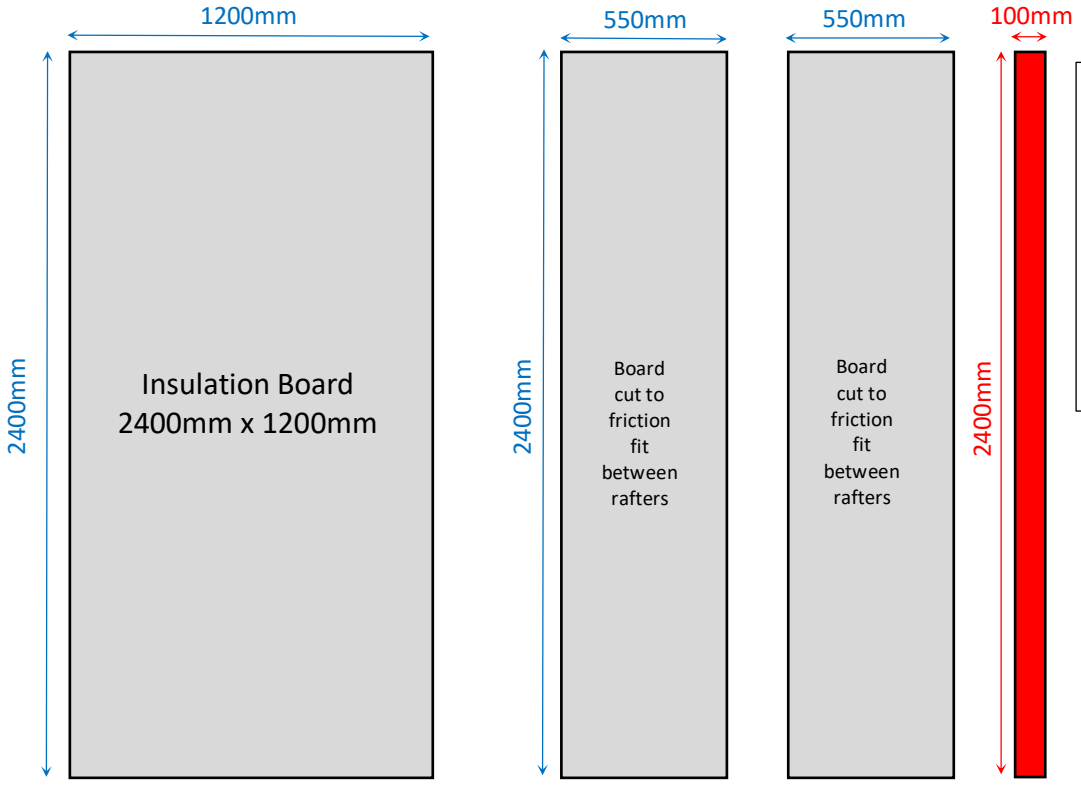

With Friction Fitting:

Where offcut *not* used:
2400mm X 100mm
= **0.24m²**

Board wasted:
8.3%

Using Insulfix Track – 100mm x 2400mm offcut is cut to 4 X 550mm x 100mm & fitted into Track

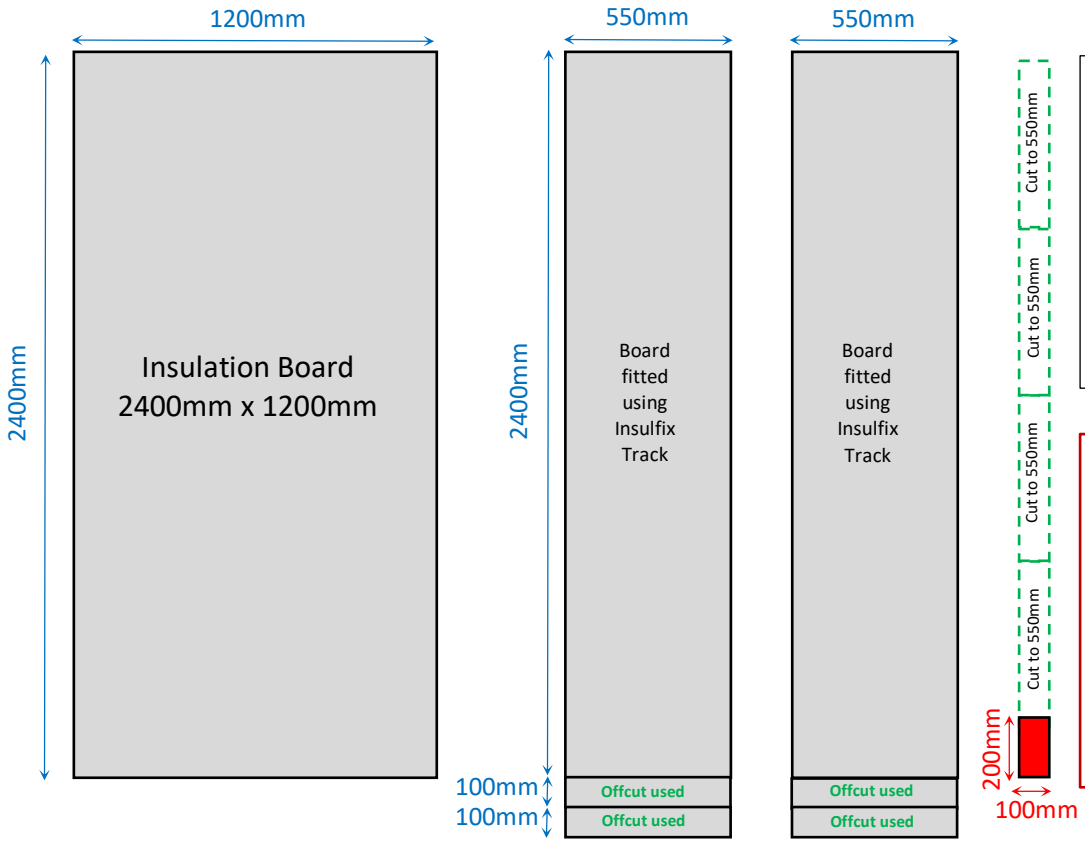

With Insulfix Track:

Where offcut *is* used:
200mm X 100mm
= **0.02m²**

Board wasted:
0.7%

With Insulfix Track when using offcuts:

7.6%
MORE board **used**

91.7%
LESS offcut **wasted**

Ref: WST/600c/Ver1.0